



DELTA UNITED

High Extendable Programmable LCRZ Meter

DU-6010 / DU-6011 100Hz~10KHz

L.C.R.Z. Meter

100Hz~10KHz, 0.1V~1.25Vrms

Applied Features

- Large LCD Display Window for Setups and Test Values
- Easy Test Condition Setting with Auto Parameter Selection & Auto Ranging Function
- Easy Manual Driven with Cursor Guiding Operation Mode
- Backup Battery Function can Recall Test Parameter Setting before Power Off
- Wide Measuring Range & High accuracy $\pm 0.1\%$
- Zeroing Offset Function
- High Measurement Rate: 75ms
- Various available options



Order Information

- DU-6010 Programmable LCRZ Meter
- DU-6011 Programmable LCRZ Meter

Standard Fittings

- Fx60-0101 LCR Test clips


Option Accessories

- Fx60-0102 SMD Test Tweezers
- Fx60-0103 High Frequency Test Cable
- Fx60-0201 Double-Sided Test Box
- Fx60-0202 SMD test box
- Fx60-0203 One-sided Test box
- Fx60-0301 SMD test bat
- Cr60-GP00 GP-IB interface
- Cr60-HD00 Handler interface
- Cr60-RS00 RS-232 interface
- Cr60-PR00 Printer interface
- Of60-ME00 100 sets of memory
- Of60-LS00 Many to scan and test frequently
- Of60-BN00 Sorting comparator
- Of60-JU00 Judgement comparator



Fx60-0101
LCR Test clips

Fx60-0102
SMD Test Tweezers

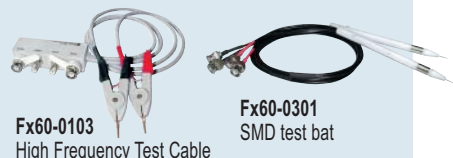

Fx60-0103
High Frequency Test Cable

Fx60-0301
SMD test bat



Specifications

Model	DU-6021 / DU-6022
Parameter	L.C.R.Z.Q.D.ESR. θ
Test Voltage	0.1V, 0.25V, 0.3V, 0.5V, 1V rms Selectable 0.01V~2.55V rms programmable, 10mV/step
Frequencies	DU-6010 100Hz, 120Hz, 1K DU-6011 100Hz, 120Hz, 1K, 10K
Display	Display LCD display, 4 1/2 digits
Trigger Mode	Internal, External, Fuzzy
Measurement Range	L : 0.1 μ H ~ 1999.9H C : 0.1 pF ~ 199.99mF R : 0.1 m Ω ~ 19.999 M Ω Z : 0.1 m Ω ~ 199.99 M Ω Q : 0.01 ~ 1999.9 D : 0.0001 ~ 19.999 ESR : 0.1 m Ω ~ 19.999 M Ω θ : -180° ~ +180°
Measurement Accuracy	Basic accuracy: $\pm 0.1\%$
Measurement Rate	Slow: 400ms, Medium: 180ms, Fast: 75ms
Function	Auto parameter selection, Auto ranging, Zeroing calibration
External DC bias	0-35 Vdc

Battery backup	Measurement status: parameter, test voltage, test frequency, test circuit (ser./par.)...
Accessories	Test clips, Power cord, Operation manual, Certificate of calibration
Power	115/230 V $\pm 10\%$, 50/60 Hz
Dimensions	360(W) x 110(H) x 350(D) mm
Weight	4.8 kg
Option Accessories	
Interface	Cr60-GP00 GP-IB interface Cr60-HD00 Handler interface Cr60-RS00 RS-232 interface Cr60-PR00 Printer interface
Comparator	Of60-BN00 Sorting comparator Reference value & HI-LO Limits setting by BIN NO. or STEPS mode, Limit of Q. D. R. θ Value, 10 BIN for sorting & BIN SUM count. Of60-JU00 Judgement comparator Reference value & HI-LO Limits setting, Limit of Q. D. R Value, GO/NG Judgement & indication with alarm.
Memory	Of60-ME00 100 sets of memory
Fixture	Test clips, test box, SMD test tweezers, SMD test bat, SMD test box



Fx60-0201
Double-Sided Test Box

Fx60-0202
SMD test box

Fx60-203
SMD test box

If all product specifications change and upgrade in websites
<http://www.deltaunited.com.tw>

